



## EBS-260 HANDJET PRINTER **CLEANING & PURGING**



## CLEANING PROCEDURE

### Black Acetone Based Ink:

- Daily: The print nozzle should be sprayed with the Acetone External Cleaning Solution (EBS2A004AR) fluid and dried with a microfiber cloth.
- Every two days: The unit should be purged with the Acetone Cleaning Cartridge (EBSXC40203-000)

### White Acetone Based Ink:

- Daily: The print nozzle should be sprayed with the Acetone External Cleaning Solution (EBS2A004AR) fluid and dried with a microfiber cloth
- Daily: The unit should be purged with the Acetone Cleaning Cartridge (EBSXC40203-000)

### Pigmented MEK Based Ink:

- Daily: The print nozzle should be sprayed with the MEK External Cleaning Solution (EBS3A001KR) fluid and dried with a microfiber cloth.
- Daily: The unit should be purged with the Acetone Cleaning Cartridge (EBSXC40001-000)

---

## HOW TO PURGE:

### 1. Power down the printer

- a. Remove the ink cartridge.
- b. Install a cleaning cartridge. Ensure you have the proper cleaning cartridge (your cleaning cartridge should match the type of ink your printer is configured to print) or the printer will not accept the cartridge.
- c. Turn the printer on and press start.
- d. When the printer has completed pressurization, press stop.

### 2. In a well-ventilated area, press and hold the start icon on the right side of the screen.

- a. Select Purge.
- b. Point the printer towards a scrap piece of cardboard/hazmat container.
- c. Hold down the trigger and the unit will beep and fire all 32 nozzles at once.

## HOW TO PURGE (CONT.):

- d. Purge the unit for approximately 30-40 seconds or until the ink is replaced by cleaning solution, then release the trigger.
3. Power down the unit and install the ink cartridge to prevent contaminants and dust from entering the unit.