

**DASCO**

Original Instructions



Labelling System

# AXON 2

MADE IN GERMANY

## 2 Original Instructions for the following products

2

Type	
Labelling System	AXON 2

**Edition:** 09/2019 - **Part No.** 9003455

### Copyright

This documentation as well as translation hereof are property of cab Produkttechnik GmbH & Co. KG.

The replication, conversion, duplication or divulgement of the whole manual or parts of it for other intentions than its original intended purpose demand the previous written authorization by cab.

### Trademark

Windows is a registered trademark of the Microsoft Corporation.

### Editor

Regarding questions or comments please contact cab Produkttechnik GmbH & Co. KG.

### Topicality

Due to the constant further development of our products discrepancies between documentation and product can occur.

Please check [www.cab.de](http://www.cab.de) for the latest update.

### Terms and conditions

Deliveries and performances are effected under the General conditions of sale of cab.

## Table of Contents

<b>1</b>	<b>Introduction .....</b>	<b>4</b>
1.1	Instructions .....	4
1.2	Intended Use .....	4
1.3	Safety Instructions .....	5
1.4	Environment .....	5
<b>2</b>	<b>Installation .....</b>	<b>6</b>
2.1	Device Overview .....	6
2.2	Setting Up .....	8
2.3	Connecting .....	9
2.3.1	Connecting to Power Supply .....	9
2.3.2	Connecting to a Computer or Computer Network .....	9
2.4	Switching on .....	9
<b>3</b>	<b>Touchscreen Display .....</b>	<b>10</b>
3.1	Start Screen .....	10
3.2	Navigation in the Menu .....	12
<b>4</b>	<b>Loading Material.....</b>	<b>13</b>
4.1	Folding down and up the Applicator .....	13
4.2	Loading Media .....	14
4.2.1	Positioning the Media Roll on the Roll Retainer .....	14
4.2.2	Inserting the Media into the Printhead and Fixing the Liner at the Rewinder .....	15
4.2.3	Removing the Wound Liner Roll .....	15
4.3	Loading Transfer Ribbon .....	16
4.4	Setting the Feed Path of the Transfer Ribbon .....	17
<b>5</b>	<b>Operation .....</b>	<b>18</b>
5.1	Synchronization of the Paper Feed .....	18
5.2	Standard Operation .....	19
<b>6</b>	<b>Configuration .....</b>	<b>20</b>
<b>7</b>	<b>Cleaning .....</b>	<b>21</b>
7.1	Cleaning Information .....	21
7.2	Cleaning the Print Roller .....	21
7.3	Cleaning the Printhead .....	21
<b>8</b>	<b>Fault Correction .....</b>	<b>22</b>
8.1	Error Display .....	22
8.2	Error Messages and Fault Correction .....	22
8.3	Problem Solution .....	24
<b>9</b>	<b>Technical Data .....</b>	<b>25</b>
<b>10</b>	<b>Licenses .....</b>	<b>26</b>
10.1	EU Declaration of Conformity .....	26
10.2	FCC .....	27
<b>11</b>	<b>Index .....</b>	<b>28</b>

## 1.1 Instructions

Important information and instructions in this documentation are designated as follows:



### Danger!

Draws attention to an exceptionally great, imminent danger to your health or life due to hazardous voltages.



### Danger!

Draws attention to a danger with high risk which, if not avoided, may result in death or serious injury.



### Warning!

Draws attention to a danger with medium risk which, if not avoided, may result in death or serious injury.



### Caution!

Draws attention to a danger with low risk which, if not avoided, may result in minor or moderate injury.



### Attention!

Draws attention to potential risks of property damage or loss of quality.



### Note!

Advices to make work routine easier or on important steps to be carried out.



### Environment!

Gives you tips on protecting the environment.

► Handling instruction

▷ Reference to section, position, illustration number or document.

\* Option (accessories, peripheral equipment, special fittings).

Time Information in the display.

## 1.2 Intended Use

- The device is intended exclusively for printing suitable labels that have been approved by the manufacturer and applying the labels onto tubes. Any other use or use going beyond this shall be regarded as improper use. The manufacturer/supplier shall not be liable for damage resulting from unauthorized use; the user shall bear the risk alone.
- The device is manufactured in accordance with the current technological status and the recognized safety rules. However, danger to the life and limb of the user or third parties and/or damage to the device and other tangible assets can arise during use.
- The device may only be used for its intended purpose and if it is in perfect working order, and it must be used with regard to safety and dangers as stated in that manual.
- Usage for the intended purpose also includes complying with that manual.



### Note!

This manual describes a labelling system which is already prepared by cab for the customers application.

### 1.3 Safety Instructions

- The device version for AC power connection is configured for voltages of 100 to 240 V AC. It only has to be plugged into a grounded socket.  
The device version for DC power connection is configured for 24 to 60 V DC.
- Only connect the device to other devices which have a protective low voltage.
- Switch off all affected devices (computer, printer, accessories) before connecting or disconnecting.
- The device may only be used in a dry environment, do not expose it to moisture (sprays of water, mists, etc.).
- Do not use the device in an explosive atmosphere.
- Do not use the device close to high-voltage power lines.
- If the device is operated with the cover open, ensure that people's clothing, hair, jewelry etc. do not come into contact with the exposed rotating parts.
- The device or parts of it can become hot while printing. Do not touch during operation, and allow to cool down before changing material and before disassembly.
- Risk of crushing when closing the cover. Touch the cover at the outside only. Do not reach into the swivel range of the cover.
- During operation, rotating parts are freely accessible. Ensure that people's clothing, hair, jewelry etc. do not come into contact with the exposed rotating parts.
- Perform only those actions described in this operating manual.  
Work going beyond this may only be performed by trained personnel or service technicians.
- Unauthorized interference with electronic modules or their software can cause malfunctions.
- Other unauthorized work on or modifications to the device can also endanger operational safety.
- Always have service work done in a qualified workshop, where the personnel have the technical knowledge and tools required to do the necessary work.
- There are various warning stickers on the device. They draw your attention to dangers.  
Warning stickers must therefore not be removed, as then you and other people cannot be aware of dangers and may be injured.
- The maximum sound pressure level is less than 70 dB(A).



#### Danger!

Danger to life and limb from power supply.

- ▶ Do not open the device casing.



#### Warning!

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### 1.4 Environment



Obsolete devices contain valuable recyclable materials that should be sent for recycling.

- ▶ Send to suitable collection points, separately from residual waste.

The modular construction of the labelling system enables it to be easily disassembled into its component parts.

- ▶ Send the parts for recycling.



The electronic circuit board of the device is equipped with a lithium battery.

- ▶ Take old batteries to collection boxes in shops or public waste disposal centers.

## 2.1 Device Overview

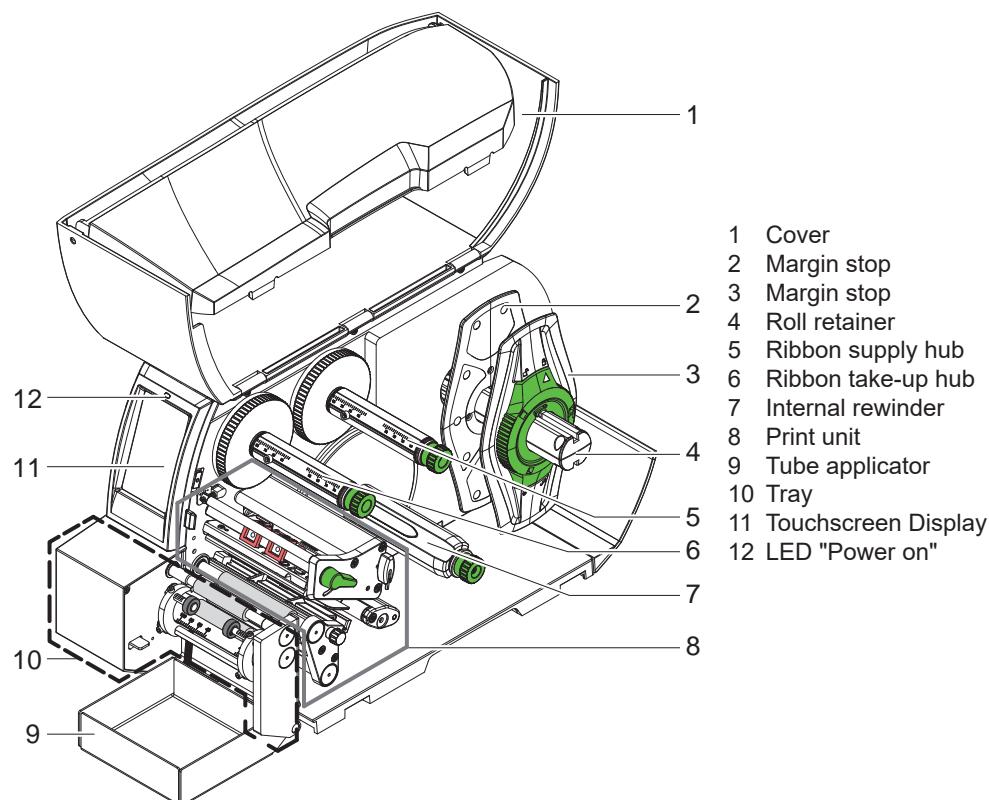


Figure 1 General overview



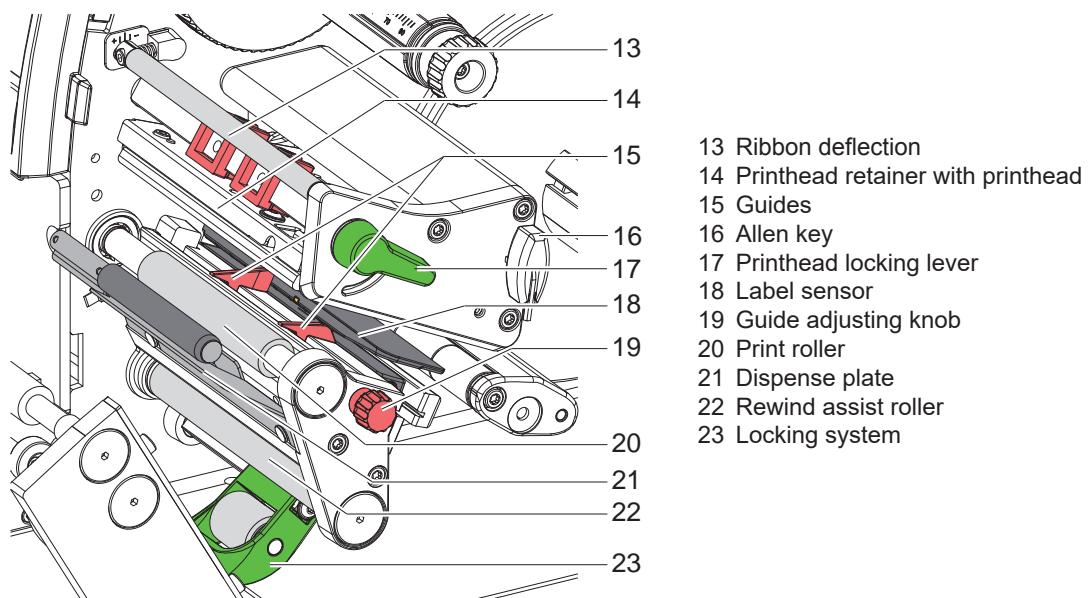


Figure 2 Print unit

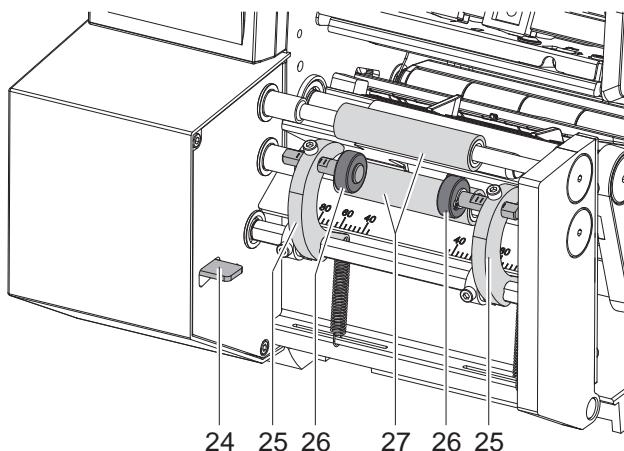

- 24 Release lever
- 25 Swing arm
- 26 Pressure roller
- 27 Transport roller

Figure 3 Tube applicator

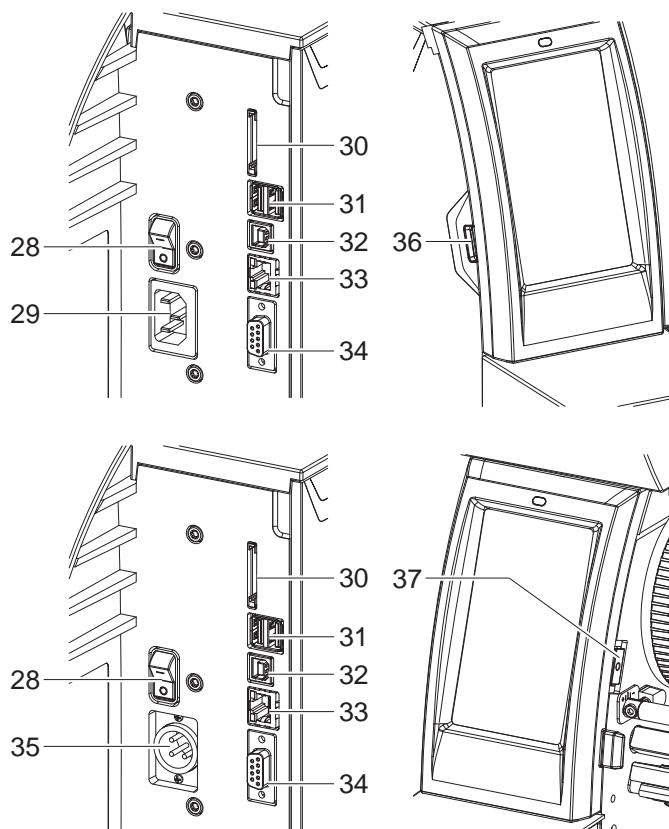

- 28 Switch ON/OFF
- 29 Power connector  
(devices for 100-240 V AC only)
- 30 Slot for SD card
- 31 2 USB host interfaces for keyboard, barcode scanner, Bluetooth adapter or WiFi stick
- 32 USB Hi-speed device interface
- 33 Ethernet 10/100 Base-T
- 34 Serial RS-232 port
- 35 Power connector  
(devices for 24-60 V DC only)
- 36 USB host interface for service key or USB memory stick
- 37 USB host interface for WiFi stick

Figure 4 Connections

## 2.2 Setting Up

**Note!**

For adjustments and simple installation work, use the accompanying Allen key located in the top section of the print unit. No other tools are required for the work described here.

**Note!**

Please keep the original packaging in case the printer must be returned.

**Attention!**

The device and printing materials will be damaged by moisture and wetness.

► Set up label printers only in dry locations protected from splash water.

- Lift the labelling system out of the box.
- Check the labelling system for damage which may have occurred during transport.
- Remove foam transportation safeguards near the printhead.
- Check delivery for completeness.

Contents of delivery:

- Labelling system consisting of label printer and tube applicator
- Tray (optional)
- Power cable (for AC devices only)
- USB cable
- Instructions
- DVD with label software, Windows driver and documentation

- Set up the labelling system on a level surface.
- Push the tray (1) under the applicator and fit it at the axle (2).

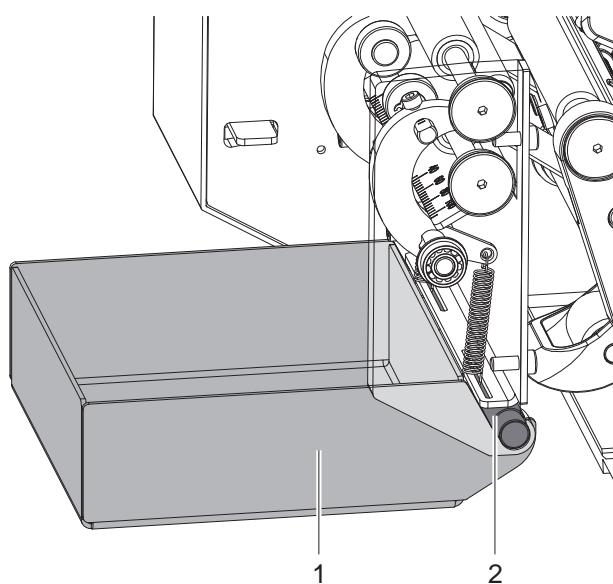


Figure 5 Fitting the tray

### 2.3 Connecting

The standard available interfaces and connectors are shown in Figure 4.

#### 2.3.1 Connecting to Power Supply

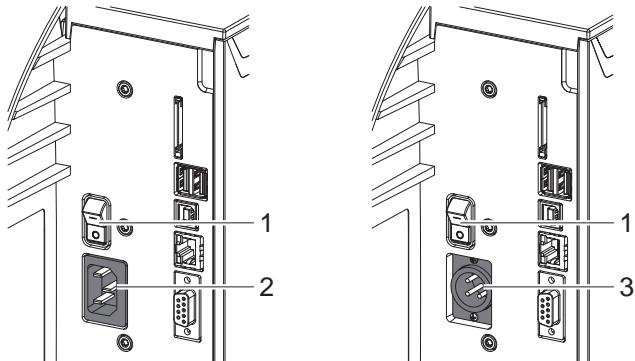


Figure 6 Connecting to power supply

##### Devices for 100-240 V AC

1. Check that the device is switched off.
2. Plug the power cable into the power connection socket (2).
3. Plug the power cable into a grounded socket.

##### Devices for 24-60 V DC

1. Check that the device is switched off.
2. Connect a suitable cable with XLR3 socket at the connector (3).  
Pin 1: -  
Pin 2: GND  
Pin 3: 24 - 60 V
3. Connect the cable to a DC power supply.

#### 2.3.2 Connecting to a Computer or Computer Network

##### Attention!

Inadequate or no grounding can cause malfunctions during operations.

Ensure that all computers and cables connected to the label labelling system are grounded.

- ▶ Connect the label labelling system to a computer or network by a suitable cable.

For details of the configuration of the individual interfaces ▷ Configuration Manual.

### 2.4 Switching on

When all connections have been made:

- ▶ Switch the labelling system on at the switch (1).  
The labelling system performs a system test, and then shows the system status *Ready* in the display (11/Figure 1).  
The pressure rollers move in to the put-in position.

The user can control the operation of the labelling system with the control panel, for example:

- Issuing, interrupting, continuing and canceling print jobs,
- Setting printing parameters, e.g. heat level of the printhead, print speed, interface configuration, language and time of day (▷ Configuration Manual),
- Control stand-alone operation with a memory module (▷ Configuration Manual),
- Update the firmware (▷ Configuration Manual).

Many functions and settings can also be controlled by software applications or by direct programming with a computer using the printer's own commands. ▷ Programming Manual for details.

Settings made on the touchscreen display make the basic settings of the label labelling system.



**Note!**

It is advantageous, whenever possible, to make adaptations to various print jobs in the software.

### 3.1 Start Screen

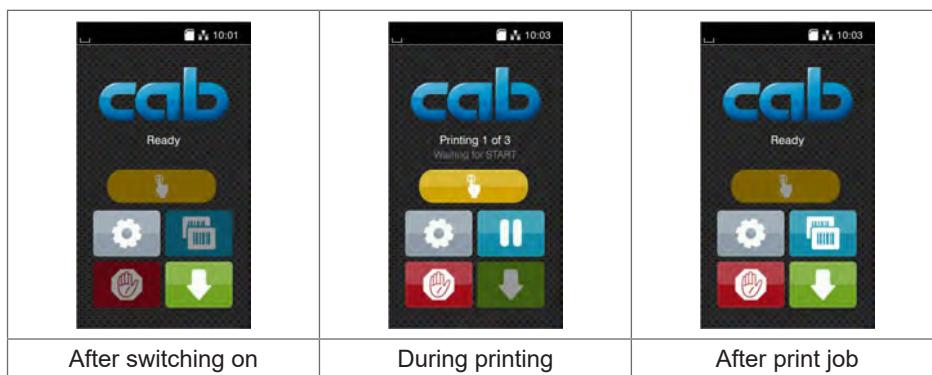


Figure 7 Start screen

The touchscreen display is operated directly by touch:

- To open a menu or select a menu item lightly touch the corresponding symbol.
- To scroll in lists slide finger up or down on the display.

	Open the menu		Repeat the last printed label
	Interrupt the print job		Cancel all print jobs
	Continue the print job		Feed a blank label
	Release printing of a single label within a print job including labelling		

Table 1 Symbols on the start screen



**Note!**

Inactive symbols are shaded.

In the headline several information are displayed as widgets depending on the configuration:

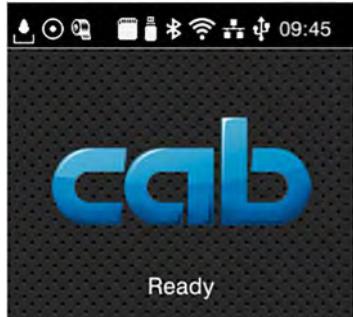


Figure 8 Widgets in the start screen

	Displays the current data transfer in the form of a falling drop.
	The Save data stream function is active ▷ Configuration manual All received data are stored in a .lbl file.
	Warning ribbon end ▷ Configuration manual The remaining diameter of the ribbon supply roll undershoots the set value.
	SD card installed
	USB memory installed
	gray: Bluetooth adapter installed, white: Bluetooth connection active
	WiFi connection active The WiFi strength is displayed by the number of white arcs.
	Ethernet connection active
	USB connection active
	abc program active
	Clock time

Table 2 Widgets in the start screen

### 3.2 Navigation in the Menu



Figure 9 Menu levels

- ▶ To open the menu select on the start screen.
- ▶ Select a theme in the selection level.  
Several themes have substructures again with selection levels.  
To return from the current level to the upper one select . To leave the menu select .
- ▶ Continue the selection until the parameter/function level is reached.
- ▶ Start a function. This will carry out the function possibly after a preparation dialogue.  
- or -  
Select a parameter to set. The setup possibilities are depending from the parameter type.

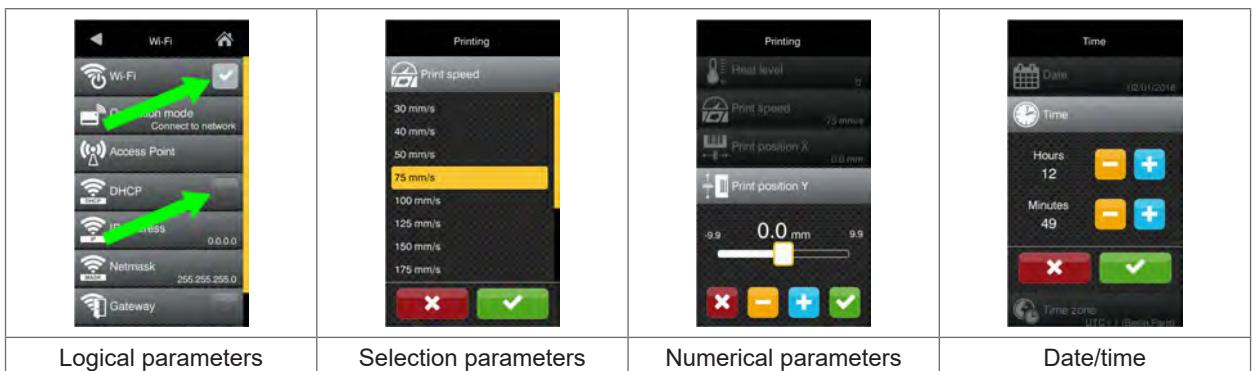


Figure 10 Samples for parameter setting

	Scroll bar for rough value setting
	Decreasing the value step-by-step
	Increasing the value step-by-step
	Return without saving the setting
	Return with saving the setting
	Parameter is disabled, touching enables the parameter
	Parameter is enabled, touching disables the parameter

Table 3 Buttons for parameter setting

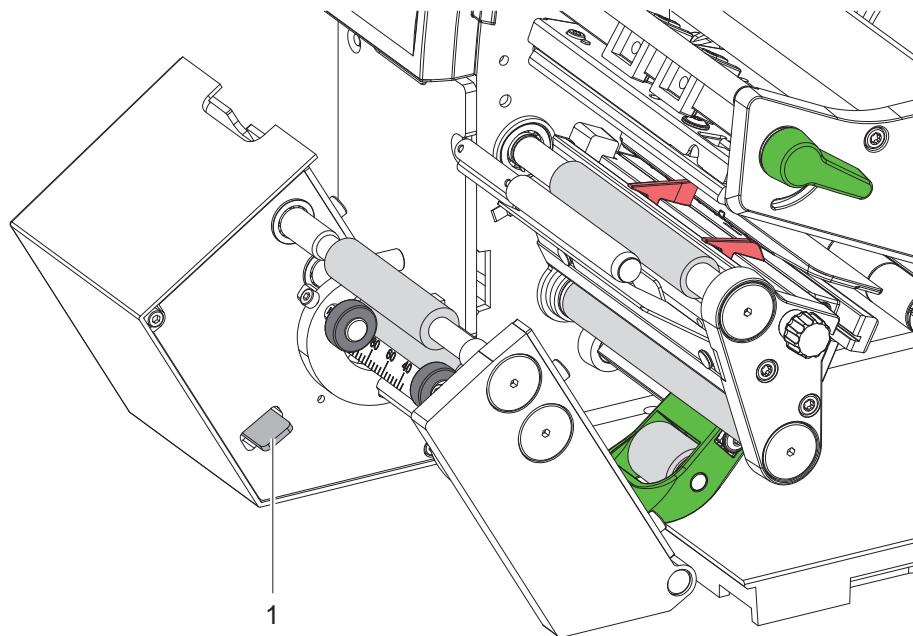
**4.1** Folding down and up the Applicator

Figure 11 Folding down the applicator

For loading labels or cleaning the applicator can be folded down from the printer:

**Folding down**

- ▶ Press down the locking lever (1) to unlock the applicator.
- ▶ Fold down the applicator.

**Folding up**

- ▶ Fold up the applicator and press it against the printer.  
The applicator will be locked automatically.

## 4.2 Loading Media

### 4.2.1 Positioning the Media Roll on the Roll Retainer

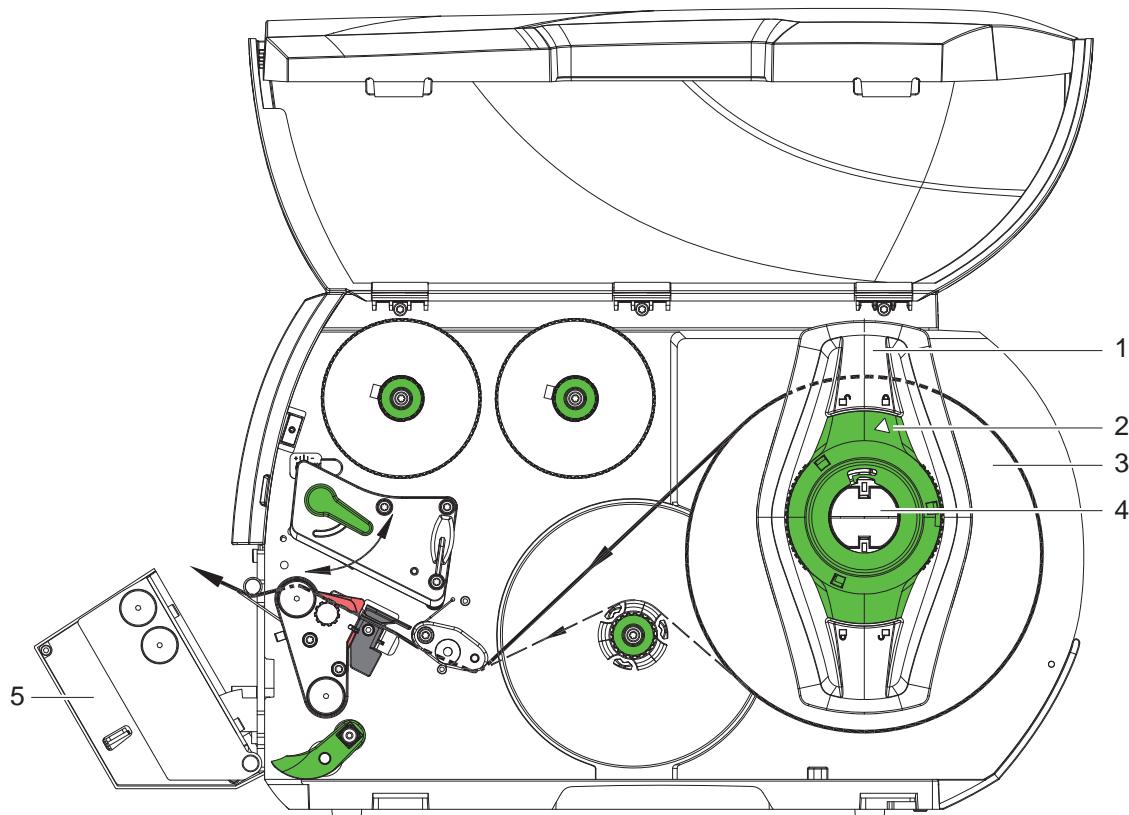


Figure 12 Loading media

1. Open cover.
2. Fold down the applicator (5)
3. Turn the ring (2) at the margin stop (1) counterclockwise, so that the arrow points to the symbol , and thus release the margin stop.
4. Remove the margin stop (1) from the roll retainer (4).
5. Load label the roll (3) on the roll retainer in such a way that the printing side of the labels is visible from above.
6. Re-mount the margin stop (1) onto the roll retainer (4). Push the margin stop (1) to the roll (3) until the roll touches both margin stops and a clear resistance is encountered.
7. Turn ring (2) clockwise, so that the arrow points to the symbol , and thus fix the margin stop (1) on the roll retainer (4).
8. Supply a longer label strip of approx. 60 cm.

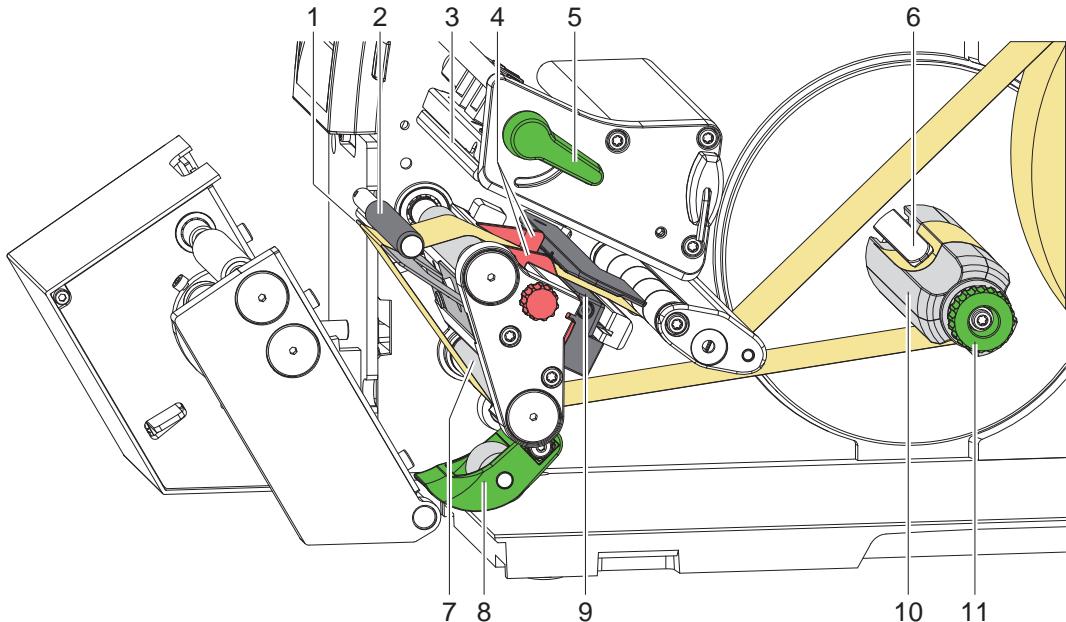
**4.2.2 Inserting the Media into the Printhead and Fixing the Liner at the Rewinder**

Figure 13 Inserting the media into the printhead and fixing the liner at the rewinder

1. Turn the lever (5) counterclockwise to lift the printhead (3).
2. Fold down the pinch roller (8).
3. Remove labels from the first 100 mm of the liner.
4. Guide the label strip over the rewinder (10), through the label sensor (9), around the dispense plate (1) and the rewind assist roller (7) to the rewinder (10).
5. Hold the rewinder (10) firmly and turn the knob (11) clockwise until it stops.
6. Push the liner under a bracket (6) of the rewinder (10) and align the outer edge of the strip to the media roll.
7. Turn knob (11) counterclockwise until it stops.  
The rewinder is fully spread, thus gripping the liner firmly.
8. Turn rewinder (10) counterclockwise to tighten the liner.
9. Swing the pinch roller (8) against the rewind assist roller (7).
10. Turn the lever (5) clockwise to lock the printhead.
11. Fold up the applicator.

**4.2.3 Removing the Wound Liner Roll**

- Cut the liner.
- Hold rewinder (10) firmly and turn knob (11) clockwise.  
The rewinder spindle relaxes and the wound roll is released.
- Remove the wound roll from rewinder (10).

### 4.3 Loading Transfer Ribbon


**Note!**

With direct thermal printing, do not load a transfer ribbon; if one has already been loaded, remove it.

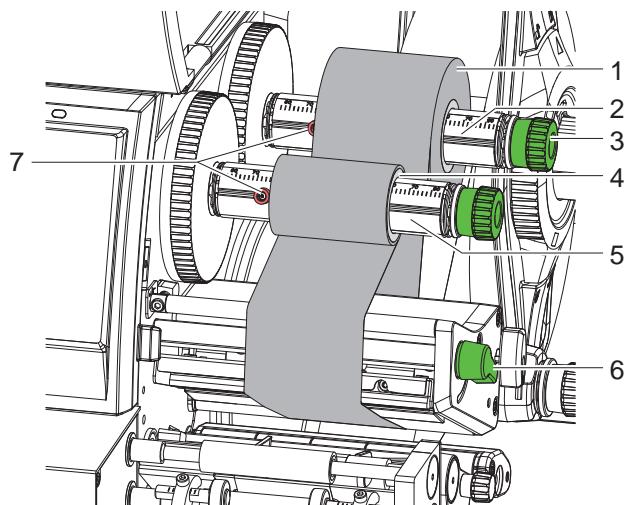


Figure 14 Loading transfer ribbon

1. Clean the printhead before loading the transfer ribbon (▷ 7.3 on page 21).
2. Turn the lever (6) counterclockwise to lift the printhead.
3. Slide the transfer ribbon roll (1) onto the ribbon supply hub (2) so that the color coating of the ribbon faces downward when being unwound.
4. Push the roll (1) against the stopper (7).
5. Hold the transfer ribbon roll (1) firmly and turn knob on ribbon supply hub (3) counterclockwise until the transfer ribbon roll is secured.
6. Slide a suitable transfer ribbon core (4) onto the transfer ribbon take-up hub (5) and secure it in the same way.
7. Guide transfer ribbon through the print unit as shown in Figure 15.
8. Secure starting end of transfer ribbon to the transfer ribbon core (4) with adhesive tape. Ensure counterclockwise rotation direction of the transfer ribbon take-up hub here.
9. Turn transfer ribbon take-up hub (5) counterclockwise to smooth out the feed path of the transfer ribbon.
10. Turn lever (6) clockwise to lock the printhead.

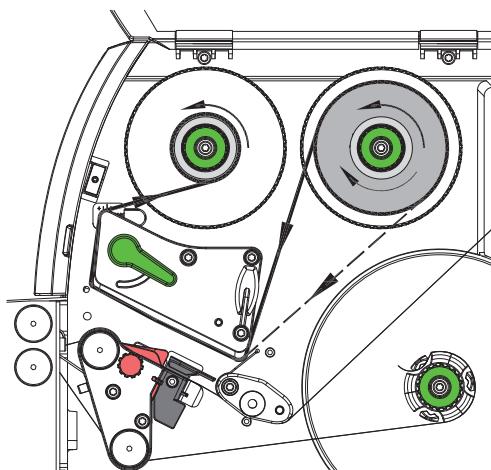


Figure 15 Transfer ribbon feed path

#### 4.4 Setting the Feed Path of the Transfer Ribbon

Transfer ribbon wrinkling can lead to print image errors. The transfer ribbon deflection (3) can be adjusted so as to prevent wrinkles.

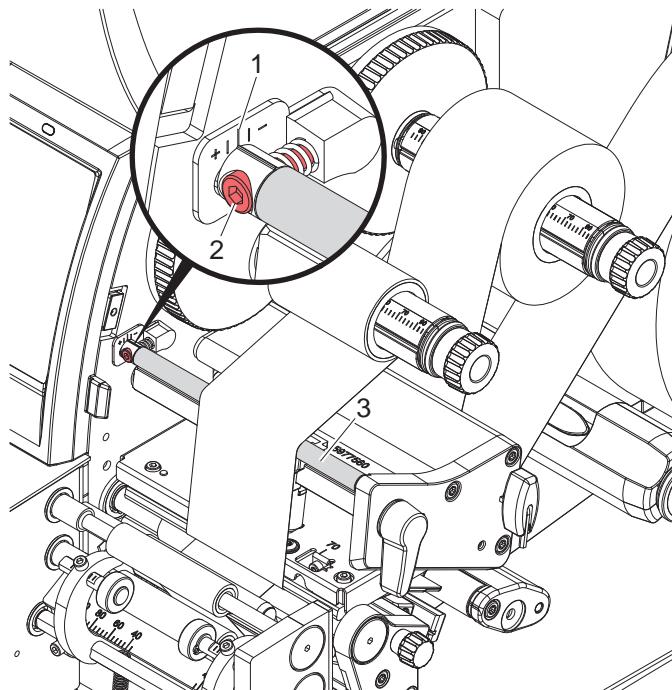


Figure 16 Setting the feed path of the transfer ribbon



**Note!**  
**The adjustment is best carried out during printing.**

- ▶ Read current setting on the scale (1) and record if necessary.
- ▶ Turn screw (2) with Allen key and observe the behavior of the ribbon.  
In the + direction, the inner edge of the ribbon is tightened, and the outer edge is tightened in the - direction.

**Attention!**

Printhead damage caused by improper handling!

- ▶ Do not touch the underside of the printhead with the fingers or sharp objects.
- ▶ Ensure that the labels are clean.
- ▶ Ensure that the label surfaces are smooth. Rough labels act like emery paper and reduce the service life of the printhead.
- ▶ Print with the lowest possible printhead temperature.

The labelling system is ready for operation when all connections have been made and labels and the transfer ribbon have been loaded.

## 5.1 Synchronization of the Paper Feed

After the label stock has been inserted a synchronization of the paper feed is required. That way the first label, which is detected by the label sensor, will be transported to the print position and all labels in front will be fed out of the printer. So the synchronization avoids, that blank labels are peeled-off together with the first printed label. That can cause useless first labels.

- ▶ Fold down the applicator.
- ▶ Select  to start the synchronization.
- ▶ Remove the blank labels peeled-off during the synchronization.
- ▶ Fold up the applicator.

**Note!**

Synchronization is not necessary if the printhead was not opened between different print jobs, even if the labelling system was switched off.

## 5.2 Standard Operation



### Warning!

Risk of injury by rotating parts!

During operation, rotating parts are freely accessible.


Ensure that people's clothing, hair, jewelry etc. do not come into contact with the exposed rotating parts.



### Attention!


Peel-off mode must be activated in the software.

This is done with the "P command" in the direct programming, ▷ Programming Manual.

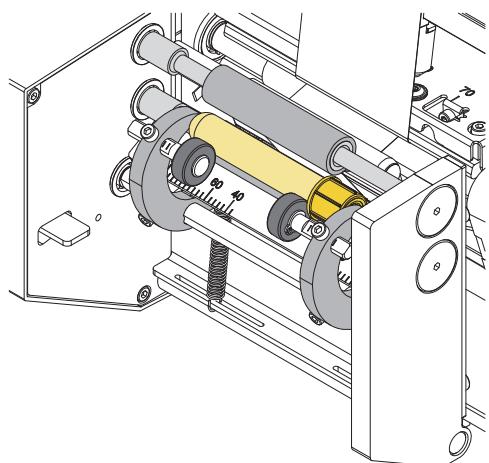

► Send a print job.

► Insert the first tube.

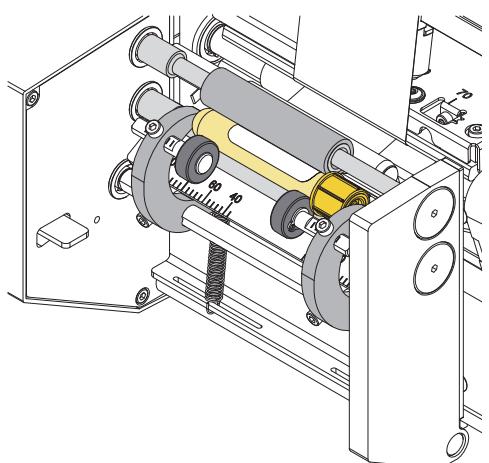

► Press

The tube will be pressed against the transport rollers. The first label will be printed and applied onto the turning tube.

After about two turns the locking clamps will be opened.

Depending on the configuration the tube will be ejected or left in the labelling area.

► Remove the tube.

► Insert the next tube.

► Press again to start next cycle.

Figure 17 Operation

**Note!**

In that chapter are described the specific applicator parameters of the menu *Labelling* only.

For more information about the configuration ▷ Configuration Manual of the printer.

- ▶ Start menu.
- ▶ Select *Setup > Labelling*.

Parameter	Meaning	Default
<i>Peel-off position</i>	Shift the position of the dispensed label relative to the dispensing edge. The setting can also be adjusted by the software. The settings of configuration and software are added together.	0.0 mm
<i>Teach-in product</i>	Function to teach the applicator to the tube diameter.	
<i>Eject tube</i>	<i>On:</i> The tube will be ejected after labelling <i>Off:</i> The tube will be left in the labelling area after labelling	Off
<i>Opening width</i>	Setting the distance between the transport rollers and pressure rollers for tube input	1
<i>Check diameter</i>	Checking the tube diameter before labelling	Off

Table 4 Parameters of the *Setup > Labelling* menu

#### Teach-in product

- ▶ Select *Teach-in product*.  
The display shows *Step 1/2 Remove tube*.
- ▶ Remove the tube from the applicator and select *Continue*.  
After a short applicator movement the display shows *Step 2/2 Insert tube*.
- ▶ Insert a tube and select *Continue*.  
After a next applicator movement the display shows *Product successfully taught-in*.  
If the result is out of the specification an error message will appear.
- ▶ Select *Continue*.

## 7.1 Cleaning Information



### Danger!

Risk of death via electric shock!

- ▶ Disconnect the labelling system from the power supply before performing any maintenance work.

The labelling system requires very little maintenance.

It is important to clean the thermal printhead regularly. This guarantees a consistently good printed image and plays a major part in preventing premature wear of the printhead.

Otherwise, the maintenance is limited to monthly cleaning of the device.



### Attention!

The labelling system can be damaged by aggressive cleansers.

Do not use abrasive cleaners or solvents for cleaning the external surfaces or modules.

- ▶ Remove dust and paper fluff from the print area with a soft brush or vacuum cleaner.
- ▶ The cover of the labelling system can be cleaned with a standard cleanser.

## 7.2 Cleaning the Print Roller

Accumulations of dirt on the print roller may impair the media transport and the print quality.

- ▶ Lift the printhead.
- ▶ Remove labels and transfer ribbon from the labelling system.
- ▶ Remove deposits with roller cleaner and a soft cloth.
- ▶ If the roller appears damaged, replace it ▷ Service Manual.

## 7.3 Cleaning the Printhead

Cleaning intervals:      direct thermal printing      - every media roll change  
                                thermal transfer printing      - every ribbon roll change

Substances may accumulate on the printhead during printing and adversely affect printing, e.g. differences in contrast or vertical stripes.



### Attention!

Printhead can be damaged!

Do not use sharp or hard objects to clean the printhead.

Do not touch protective glass layer of the printhead.



### Attention!

Risk of injury from the hot printhead line.

Ensure that the printhead has cooled down before starting cleaning.

- ▶ Lift the printhead.
- ▶ Remove labels and transfer ribbon from the labelling system.
- ▶ Clean printhead surface with special cleaning pen or a cotton swab dipped in pure alcohol.
- ▶ Allow printhead to dry for 2–3 minutes before commissioning the labelling system.

## 8.1 Error Display

The appearance of an error will be shown on the display:



Figure 18 Error display

The error treatment is pending on the error type ▷ 8.2 on page 22.

The display offers the following possibilities to continue after an error occurred:

<i>Repeat</i>	The print job will be continued after clearing the error cause.
<i>Cancel</i>	The print job will be cancelled.
<i>Feed</i>	The paper feed will be synchronized. Following the print job can be continued.
<i>Ignore</i>	The error message will be ignored. The print job will be continued possibly with limited performance.
<i>Save log</i>	The error does not allow print operation. For detailed analysis several system files can be saved on an external memory.

Table 5 Buttons in the error display

## 8.2 Error Messages and Fault Correction

Error message	Cause	Remedy
<i>Barcode error</i>	Invalid barcode content, e.g. alphanumeric characters in a numerical barcode	Correct the barcode content.
<i>Barcode too big</i>	The barcode is too big for the allocated area of the label	Reduce the size of the barcode or move it.
<i>Buffer overflow</i>	The input buffer memory is full and the computer is still transmitting data.	Use data transmission via protocol (preferably RTS/CTS).
<i>Device not conn.</i>	Programming addresses a non-existent device	Either connect this device or correct the programming.
<i>Device not locked</i>	The tube applicator is not in operating position	Fold up the applicator.
<i>File not found</i>	Requested file is not on the card	Check the contents of the card.
<i>Font not found</i>	Error with the selected download font	Cancel current print job, change font.
<i>Initialization failed</i>	Hardware error tube applicator	Switch off and on the system. If error recurs call service.
<i>Memory overflow</i>	Current print job contains too much information, e.g. selected font, large graphics	Cancel current print job. Reduce amount of data to be printed.
<i>Name exists</i>	Duplicate usage of field name in the direct programming	Correct programming
<i>No label found</i>	There are labels missing on the label material	Press <i>Repeat</i> repeatedly until printer recognizes the next label on the material.
	The label format as set in the software does not correspond with the real label format	Cancel current print job. Change the label format set in the software. Restart print job.
	Printer is loaded with continuous paper, but the software is set on labels	Cancel current print job. Change the label format set in the software. Restart the print job.

Error message	Cause	Remedy
No label size	The size of the label is not defined in the programming.	Check programming.
No tube detected	No tube in the labelling area	Insert tube.
Out of paper	Out of label roll	Load labels.
	Error in the paper feed	Check paper feed.
Out of ribbon	Out of transfer ribbon	Insert new transfer ribbon.
	Transfer ribbon melted during printing	Cancel current print job. Change the heat level via software. Clean the printhead ▶ 7.3 on page 21 Load transfer ribbon. Restart print job.
Pinch roller open	Pinch roller at the rewind guide roller is not locked in peel-off mode	Swing the pinch roller against the rewind assist roller.
Printhead open	Printhead not locked	Lock printhead.
Printhead too hot	Printhead is overheated	After pausing the print job will be continued automatically. If the fault recurs repeatedly, reduce the heat level or the print speed via software.
Read error	Read error when reading from the memory card	Check data of the card. Backup data, reformat card.
Remove ribbon	Transfer ribbon is loaded although the printer is set to direct thermal printing	For direct thermal printing remove ribbon.
		For thermal transfer printing set the printer in the configuration or in the software to transfer printing.
Ribbon ink side	Identified ribbon unwinding direction does not match to the setup setting	Ribbon loaded incorrectly. Clean the printhead ▶ 7.3 on page 21 Load the ribbon correctly.
		Setting does not match to the used ribbon. Correct the setting.
Syntax error	Labelling system has received an unknown or invalid command from the computer.	Press <i>Ignore</i> to skip the command or press <i>Cancel</i> to cancel the print job.
Tube not ejected	Tube was not ejected by the ejection movement.	Remove the tube by hand.
Unknown card	Card not formatted, Type of card not supported	Format card, use different type of card.
Voltage error	Hardware error	Switch the labelling system off and then on. If error recurs call service. It is shown which voltage has failed. Please note.
Write error	Hardware error	Repeat the write process, reformat card.
Wrong tube diameter	The tube applicator has detected a tube with wrong diameter.	Insert a suitable tube.

Table 6 Error Messages and Fault Correction

### 8.3 Problem Solution

Problem	Cause	Remedy
Transfer ribbon creases	Transfer ribbon deflection not adjusted	Adjust the transfer ribbon deflection. ▷ 4.4 on page 17
	Transfer ribbon too wide	Use a transfer ribbon slightly wider than the width of label.
Print image has smears or voids	Printhead is dirty	Clean the printhead ▷ 7.3 on page 21
	Temperature too high	Decrease temperature via software.
	Unsuitable combination of labels and transfer ribbon	Use different type of ribbon.
Printer does not stop after transfer ribbon runs out	Thermal printing is chosen in the software	Change to thermal transfer printing.
Printer prints a sequence of characters instead of the label format	Printer is in ASCII dump mode	Cancel the ASCII dump mode.
Printer transports label media, but transfer ribbon does not move	Transfer ribbon incorrectly inserted.	Check and, if necessary, correct the transfer ribbon web and the orientation of the label side.
	Unsuitable combination of labels and transfer ribbon	Use different type of ribbon.
Printer only prints each second label	Setting of the size in the software is too large.	Change the size in the software.
Vertical white lines in the print image	Printhead is dirty	Clean the printhead ▷ 7.3 on page 21
	Printhead is defective (failure of heat elements)	Change the printhead. ▷ Service Manual.
Horizontal white lines in the print image	Printer is used with the <i>backfeed &gt; smart</i> in the cut or peel-off mode	Set the <i>backfeed &gt; always</i> in the setup. ▷ Configuration Manual.
Print image is irregular, one side is lighter	Printhead is dirty	Clean the printhead ▷ 7.3 on page 21

Table 7 Problem solution

## 9 Technical Data

25

Tube labeling system			Type	AXON 2 4.3	AXON 2 4
Material guide				centered	
Printing method	Thermal transfer			●	●
	Thermal direct			●	○
Printable resolution	dpi	300	300	600	
Print speed	mm/s	100	100	100	
Print width	up to mm	108.4	105.7	105.7	
<b>Material</b>					
Tubes	Orientation during labeling			horizontal	
Diameter	mm	10 - 17			
Length capped	mm	38 - 105			
Conicity (change of diameter)	up to %	0.8			
Labels	Material	Paper, plastics PP, PC			
Width	mm	10 - 56			
Height	from mm	15			
Roll diameter	up to mm	205			
Core diameter	mm	38 - 76			
Winding		outside			
Liner material width	up to mm	60			
Ribbon	Ink side			outside or inside	
	Roll diameter	up to mm	80		
	Core diameter	mm	25		
	Variable length	up to m	450		
	Width	mm	25 - 114		
<b>Printer sizes and weight</b>					
Width x Height x Depth			mm	252 x 288 x 520	
Weight			approx. kg	12	
<b>Interfaces</b>					
RS232C		1,200 to 230,400 baud/8 Bit			
USB 2.0		Hi-speed device to connect a PC			
Ethernet		10/100 Mbit/s			
1xUSB host on the operation panel	for	Service Key, USB memory stick			
1xUSB host on the operation panel	for	USB WLAN stick 2.4 GHz 802.11b/g/n			
2xUSB host on the back of the device	for	keyboard, barcode scanner, USB Bluetooth adapter, USB WLAN stick			
Digital I/O interface		providing 8 inputs and outputs	□		
<b>Operating data</b>					
Power supply	100 - 240 VAC, 50/60 Hz, PFC	■			
	24 - 60 VDC	□			
Power consumption	Standby <10 W / typical 100 W				
Temperature / humidity	Operation	+5 - 40°C / 10 - 85 %, not condensing			
	Stock	0 - 60°C / 20 - 85 %, not condensing			
	Transport	-25 - 60°C / 20 - 85 %, not condensing			
Approvals	CE, FCC Class A, ICES-3, cULus, CB				
<b>Operation panel</b>					
Colored LCD touch display	Screen diagonal "	4.3			
	Resolution W x H px	272 x 480			
<b>Monitoring</b>					
	Ribbon pre-warning	Periphery error			
	End of ribbon	Print head voltage			
	Direction of ribbon winding	Print head temperature			
	End of labels	Print head open			
		Pinch roller open			
<b>Fonts</b>					
Font types internally provided	5 Bitmap fonts: 12 x 12 dots 16 x 16 dots 16 x 32 dots OCR-A OCR-B	7 vector fonts: AR Heiti Medium GB-Mono CG Triumvirate Condensed Bold Garuda HanWangHeiLight Monospace 821 Swiss 721 Swiss 721 Bold			
to be stored	TrueType fonts				

For comprehensive technical data see SQUIX 4, [www.cab.de/en/squix](http://www.cab.de/en/squix)

● typical ○ possible ■ standard □ option

<b>Fonts</b>		
Character sets	Windows-1250 to -1257 DOS 437, 737, 775, 850, 852, 857, 862, 864, 866, 869 EBCDIC 500 ISO 8859-1 to -10 and -13 to -16 WinOEM 720 UTF-8 MacRoman DEC MCS KOI8-R	Western European Eastern European Chinese simplified Chinese traditional Thai Arabic
Bitmap fonts	Widths and heights 1 - 3 mm Zoom factors 2 to 10 Orientations 0°, 90°, 180°, 270°	
Vector / TrueType fonts	Widths and heights 0.9 - 128 mm Continuous zoom Orientation 360° in steps of 1°	
Font styles	bold, italic, underlined, outline, inverse - depending from the font types	
Character spacing	variable or monospace	
<b>Graphics</b>		
Graphic elements	Lines, arrows, rectangles, circles, ellipses - filled or filled with fading	
Graphic formats	PCX, IMG, BMP, TIF, MAC, GIF, PNG	
<b>Barcodes</b>		
Linear	Code 39, Code 93 Code 39 Full ASCII Code 128 A, B, C EAN 8, 13 EAN/UCC 128/GS1-128 EAN/UPC Appendix 2 EAN/UPC Appendix 5 FIM HIBC	Interleaved 2/5 Ident and routing code of Deutsche Post Codabar JAN 8, 13 MSI Plessey Postnet RSS 14 UPC A, E, EO
2D and stacked	DataMatrix DataMatrix Rect. Extension QR code Micro QR code GS1 QR code GS1 DataMatrix	Micro PDF 417 DataMatrix Rect. Extension UPS MaxiCode GS1 DataBar Aztec Codablock F RSS 14 truncated, limited, stacked / omnidirectional
	All codes are variable in terms of height, modular width and ratio; orientations 0°, 90°, 180°, 270° check digit, plain text printout and start / stop code are options depending from the type of code	
<b>Software</b>		
Label software	cablabel S3 Lite cablabel S3 Pro	cablabel S3 Viewer cablabel S3 Print
Running also with	CODESOFT, NiceLabel, BarTender	
Stand-alone operation		■
Windows printer drivers WHQL certified for	Windows Vista Windows 7 Windows 8 Windows 8.1 Windows 10	Server 2008 Server 2008 R2 Server 2012 Server 2012 R2 Server 2016 Server 2019
Apple Mac OS X printer drivers	from version 10.6	■
Linux printer drivers	from CUPS 1.2	■
Programming	JScript printer language abc Basic Compiler	■
Integration	SAP Database Connector	■
Administration	Printer control Configuration in Intranet and Internet Network Manager (in preparation)	■

cab uses free and Open Source Software in its products.

For information see [www.cab.de/opensource](http://www.cab.de/opensource)

## 10.1 EU Declaration of Conformity

### EU Declaration of Conformity

We hereby declare that the following device, due to its design, construction and the version placed on the market by us, complies with all applicable health and safety requirements of the relevant EC directives. In the event of unauthorized modification of the device or its intended purpose, this declaration will no longer be valid.

Device:	Labelling System
Type:	AXON 2 (100 -240 V AC)
Applied EU Directives	Applied Standards
Directive 2006/42/EC on machinery	<ul style="list-style-type: none"> <li>• EN ISO 12100:2010</li> <li>• EN ISO 13857:2008</li> <li>• EN 349:1993+A1:2008</li> <li>• EN 60950-1:2006 +A11:2009+A12:2011+A1:2 010+A2:2013</li> </ul>
Directive 2014/30/EU relating to electromagnetic compatibility	<ul style="list-style-type: none"> <li>• EN 55024:2010</li> <li>• EN 55032:2012</li> <li>• EN 61000-3-2:2014</li> <li>• EN 61000-3-3:2013</li> <li>• EN 61000-6-2:2005</li> </ul>
Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment	<ul style="list-style-type: none"> <li>• EN 50581:2012</li> </ul>
Commission delegated directive (EU) 2015/863 amending Annex II to Directive 2011/65/EU of the European Parliament and of the Council as regards the list of restricted substances	
Authorized representative for technical documentation:	<b>Erwin Fascher</b> Am Unterwege 18/20 99610 Sömmerda
Signed for, and on behalf of the Manufacturer :	Sömmerda, 14.09.2019  <b>Erwin Fascher</b> Managing Director
cab Produkttechnik Sömmerda Gesellschaft für Computer- und Automationsbausteine mbH 99610 Sömmerda	

## EU Declaration of Conformity

We hereby declare that the following device, due to its design, construction and the version placed on the market by us, complies with all applicable health and safety requirements of the relevant EC directives. In the event of unauthorized modification of the device or its intended purpose, this declaration will no longer be valid.

Device:	<b>Labelling System</b>
Type:	<b>AXON 2 (24 - 60 V DC)</b>
Applied EU Directives	Applied Standards
<b>Directive 2006/42/EC on machinery</b>	<ul style="list-style-type: none"> <li>• EN ISO 12100:2010</li> <li>• EN ISO 13857:2008</li> <li>• EN 349:1993+A1:2008</li> </ul>
<b>Directive 2014/30/EU relating to electromagnetic compatibility</b>	<ul style="list-style-type: none"> <li>• EN 55032:2012</li> <li>• EN 55011:2016 +A1:2017</li> <li>• EN 61326-1:2013</li> <li>• EN 61326-2-6:2013</li> <li>• EN 61000-6-2:2005</li> </ul>
<b>Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment</b>	<ul style="list-style-type: none"> <li>• EN 50581:2012</li> </ul>
<b>Commission delegated directive (EU) 2015/863 amending Annex II to Directive 2011/65/EU of the European Parliament and of the Council as regards the list of restricted substances</b>	
Authorized representative for technical documentation:	<b>Erwin Fascher</b> Am Unterwege 18/20 99610 Sömmerda
Signed for, and on behalf of the Manufacturer :	Sömmerda, 14.09.2019  <b>Erwin Fascher</b> Managing Director
cab Produkttechnik Sömmerda Gesellschaft für Computer- und Automationsbausteine mbH 99610 Sömmerda	

### 10.2 FCC

**NOTE : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. The equipment generates, uses, and can radiate radio frequency and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user may be required to correct the interference at his own expense.**

**A**

Applicator  
folding down and up.....13

**C**

Cleaning  
printhead .....21  
print roller .....21  
Cleaning information .....21  
Connecting .....9  
Contents of delivery .....8

**D**

Device overview .....6

**E**

Environment .....5  
Errors  
correction .....22  
messages .....22  
EU Declaration of Conformity .....26

**I**

Important information .....4  
Intended use .....4

**L**

Lithium battery .....5  
Loading media .....14  
Loading transfer ribbon .....16

**O**

Operation .....18

**P**

Peel-off position .....20  
Power supply .....5  
Printhead  
cleaning .....21  
damage .....18  
Print roller, cleaning .....21  
Problem solution .....24

**R**

Removing the liner roll .....15

**S**

Safety instructions .....5  
Service work .....5  
Switching on .....9  
Synchronization of the paper feed .....18

**V**

Voltage .....5

**W**

Warning stickers .....5